
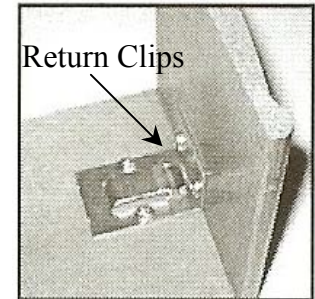
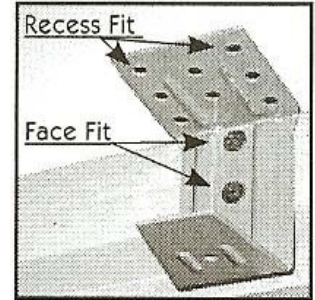


If installing on plaster or wallboard where possible pick up timber stud.

If unable to locate stud, use a suitable wall plug or toggle for plasterboard to hold the brackets.

Install the Brackets

Remove the End brackets and identify which is left and right hand. They are identified by the letters LH and RH stamped on the brackets. These brackets need to be positioned to support each end of the head rail. Secure the brackets into place with screws appropriate to the surface. For **Face Fit** blinds use the holes at the back of the bracket. For **Recess blind** use the holes at the top of the bracket. If one or more Intermediate brackets are supplied, position them evenly between the End brackets making sure they line up the End brackets. Make sure the position of the Intermediate bracket does not interfere with the ladders of the blind. Secure in the same fashion as the End brackets.



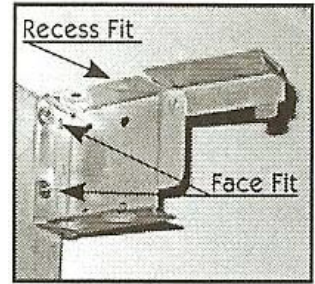


Fit the blinds into the Brackets

Open the bracket gates on the End brackets. Slide the head rail into the brackets. Close the bracket gates to secure to blind.

Attach the fascia

If the fascia has returns that are not attached, clip them on using the clips on the back of the fascias. If hang clips are not attached (Timber Style, Jarrah Image Face Fit), insert them into the groove running parallel to the length of the fascia. Press firmly and rotate to the correct position. Hang the fascia on the head rail using the hanging clips at the back.

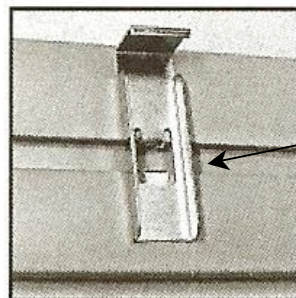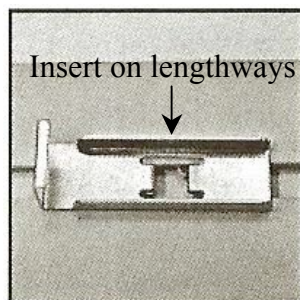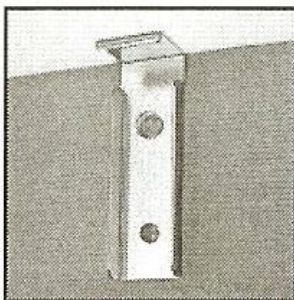


Twist to correct position

How to install the Cord Cleat

The Cord Cleat is used to tie excess cords out of the reach of children. When fitted at a suitable height cords can be wrapped around the Cleat, keeping them out of reach of children and neatly off the floor or furniture.

1. Position the Cleat against the window frame in a place that is accessible to the user while remaining inaccessible to small children.
2. Use a drill to fasten the Cleat with the two screws provided.

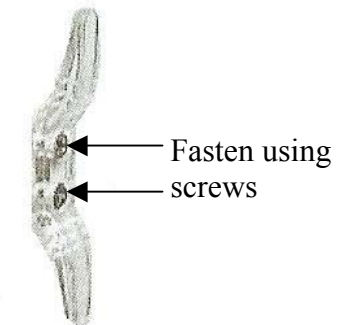

⚠ WARNING

Young children can **STRANGLE** in cord bead chain loops. They can also wrap cords around their necks and **STRANGLE**.

Always keep cords and bead chains out of children's reach.

Install safety devices that remove the cord loop or reduce access to cords

Move cots, play pens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.

Do not tie cords together. Make sure cords do not twist together and create a loop.

