

If installing on plaster or wallboard where possible pick up timber stud. If unable to locate stud, use a suitable wall plug or toggle for plasterboard to hold the brackets.


### Face Fit

1. Attach brackets onto fixing surface 20mm lower than the position measure to the top of the blind. The end brackets should be approximately 100mm from each end with additional brackets spaced evenly in-between. Make sure the spacing of the brackets does not interfere with the head rail pulleys.
2. Place the blind onto the top of the bracket and attach with a screw vertically up into the head board of the blind.

### Top fixing

1. Pre-drill holes into the head rail of the blind. Drill the end holes approximately 100mm from each end. Drill further holes in-between approximately 300mm apart.
2. Screw up through the head rail into the top of the reveal or recess. Make sure the screw or fixing being used is suitable for the surface being fitted to.

 
Face fit bracket attached to the wall and head rail

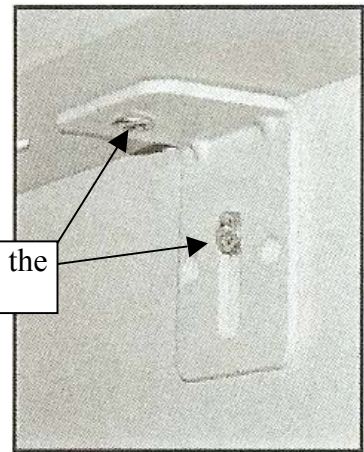

### How to install the Cord Cleat

The Cord Cleat is used to tie excess cords out of the reach of children. When fitted at a suitable height cords can be wrapped around the Cleat, keeping them out of reach of children and neatly off the floor or furniture.

 1. Position the Cleat against the window frame in a place that is accessible to the user while remaining inaccessible to small children.
2. Use a drill to fasten the Cleat with the two screws provided.



Fasten using screws

### WARNING

Young children can **STRANGLE** in cord bead chain loops. They can also wrap cords around their necks and **STRANGLE**.

Always keep cords and bead chains out of children's reach.

Install safety devices that remove the cord loop or reduce access to cords

Move cots, play pens, and other furniture away from cords and bead chains. Children can climb furniture to get to cords.

Do not tie cords together. Make sure cords do not twist together and create a loop.

