

Roller Installation Instructions

WARNING – CURTAIN & BLIND CORDS HAVE CAUSED THE DEATH OF YOUNG CHILDREN AND MUST BE INSTALLED SO THAT THEY ARE NOT A STRANGULATION HAZARD. FOLLOW THE INSTALLATION INSTRUCTIONS

1. Determine whether the blind will be left hand or right hand control, face fit or recess fit.
2. Install the control end bracket, this is the one with the metal tag, on the control side of the window. Use the slotted holes and place the screws in the centre to allow for adjustment.
3. Install the idle end bracket at the opposite end.
4. Install the blind by placing the sidewinder over the metal tag on the control end bracket.
5. Turn the spiral wheel on the idle end to retract the pin, centre over the hole in the idle bracket and release the pin.
6. Make sure the blind tracks correctly by lowering it all the way down then back up again using the control chain.
7. If the cloth rolls away from one side, lower the blind completely to expose the tube, place a layer of masking tape around the tube at the end the blind is rolling away from. And raise the blind again.
8. If the blind still will not go up straight, repeat the process.
9. Install a cord safety device as per the instructions provided with the device.


All corded devices to be in compliance with the following as per the Trade Practice (Consumer Product Safety Standard-Corded Internal Window Coverings) Regulations 2010 (2010 no.212.)

Chain Safe (Including Screw)

Part No. 5.6002..

WARNING – CURTAIN & BLIND CORDS HAVE CAUSED THE DEATH OF YOUNG CHILDREN AND MUST BE INSTALLED SO THAT THEY ARE NOT A STRANGULATION HAZARD. FOLLOW THE INSTALLATION INSTRUCTIONS

The Chain Safe Device can be used for Vertical Blinds, Roller Blinds or Roman Blinds.

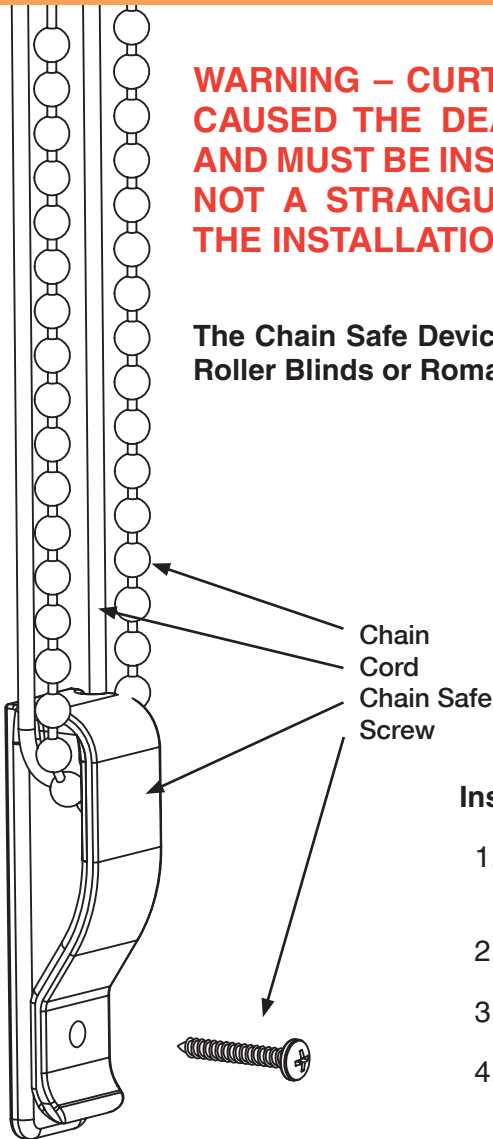

Instructions:

1. Pass cord and or chain through the bottom of the device.
2. Insert screw.
3. Pull down with light tension.
4. Screw into place.